


S-parameters

An introduction

Author: Jean Burnikell
Presented: Martyn Gaudion


www.polarinstruments.com

S-parameters are a useful method for representing a circuit as a “black box”

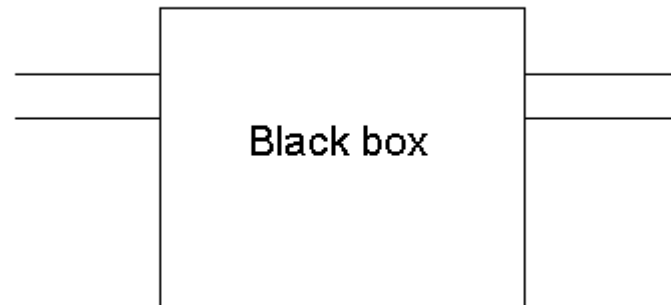

S-parameters are a useful method for representing a circuit as a “black box”

The external behaviour of this black box can be predicted without any regard for the contents of the black box.

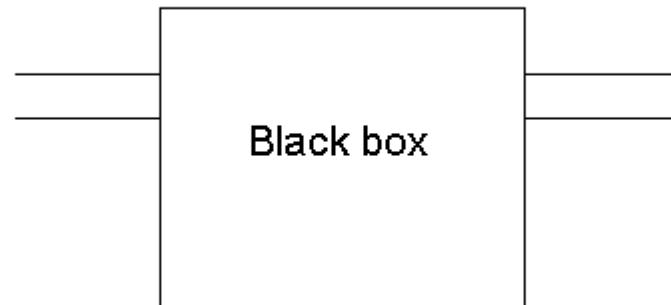


S-parameters are a useful method for representing a circuit as a “black box”

The external behaviour of this black box can be predicted without any regard for the contents of the black box.

This black box could contain anything:

a resistor,
a transmission line
or an integrated circuit.

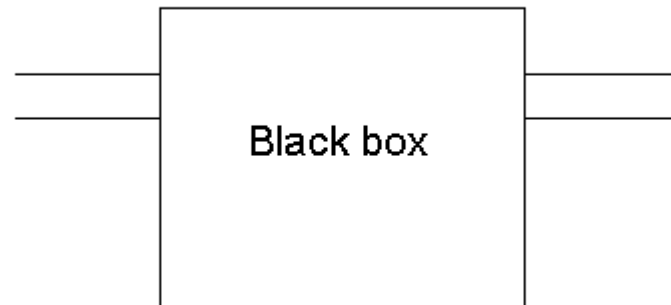

A “black box” or network may have any number of ports.

This diagram shows a simple network with just 2 ports.



A “black box” or network may have any number of ports.

This diagram shows a simple network with just 2 ports.




Note :

A *port* is a terminal pair of lines.


S-parameters are measured by sending a *single* frequency signal into the network or “black box” and detecting what waves exit from each port.

Power, voltage and current can be considered to be in the form of waves travelling in both directions.

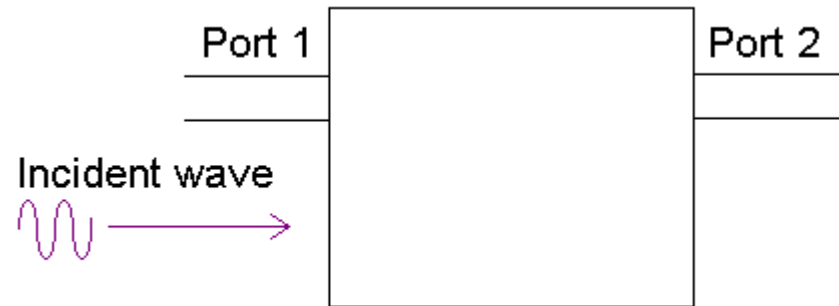

S-parameters are measured by sending a *single* frequency signal into the network or “black box” and detecting what waves exit from each port.

Power, voltage and current can be considered to be in the form of waves travelling in both directions.

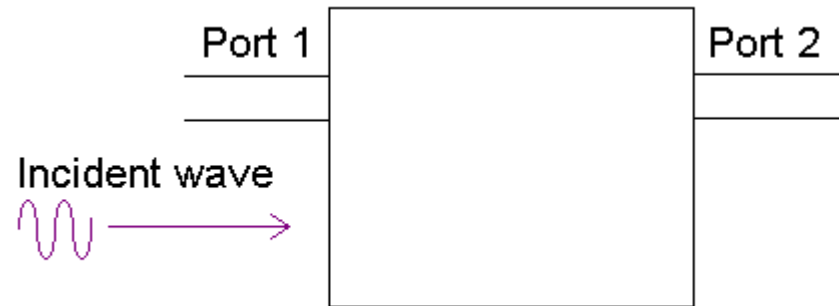


For a wave incident on Port 1, some part of this signal reflects back out of that port and some portion of the signal exits other ports.



I have seen **S**-parameters described as S_{11} , S_{21} , etc. Can you explain?

First lets look at S_{11} .

S_{11} refers to the signal reflected at Port 1 for the signal incident at Port 1.

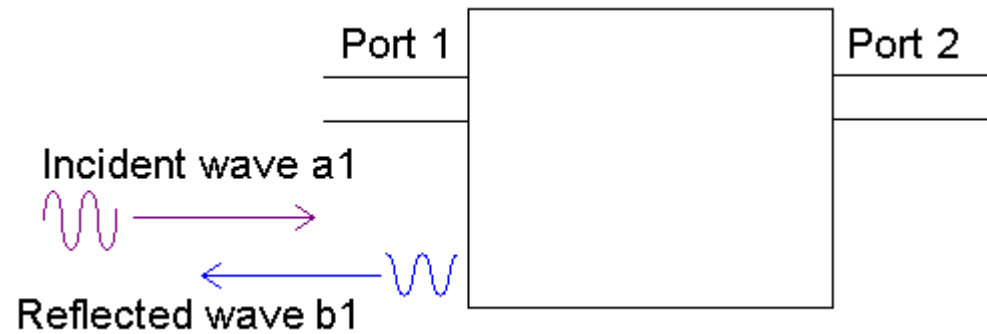


I have seen S-parameters described as S_{11} , S_{21} , etc. Can you explain?

First lets look at S_{11} .

S_{11} refers to the signal reflected at Port 1 for the signal incident at Port 1.

Scattering parameter S_{11} is the ratio of the two waves b_1/a_1 .

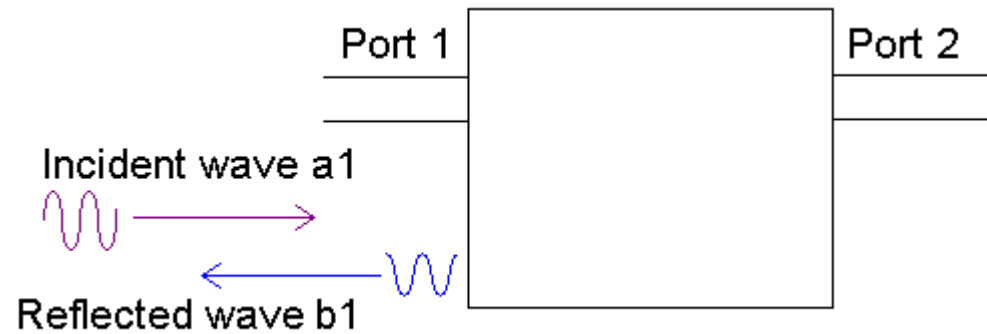

I have seen S-parameters described as S_{11} , S_{21} , etc. Can you explain?

Now lets look at S_{21} .

S_{21} refers to the signal exiting at Port 2 for the signal incident at Port 1.



Scattering parameter S_{21} is the ratio of the two waves $b2/a1$.

I have seen S-parameters described as S_{11} , S_{21} , etc. Can you explain?

Now lets look at S_{21} .

S_{21} refers to the signal exiting at Port 2 for the signal incident at Port 1.

Scattering parameter S_{21} is the ratio of the two waves b_2/a_1 .



S_{21} ? Surely that should be S_{12} ??

I have seen S-parameters described as S_{11} , S_{21} , etc. Can you explain?


Now lets look at S_{21} .

S_{21} refers to the signal exiting at Port 2 for the signal incident at Port 1.

Scattering parameter S_{21} is the ratio of the two waves b_2/a_1 .



S_{21} ? Surely that should be S_{12} ??
 S_{21} is correct! S-parameter convention always refers to the responding port first!

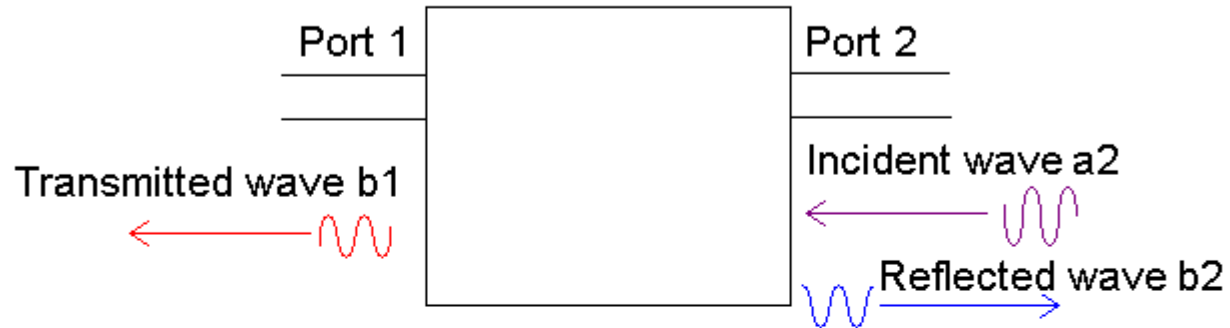

S22 refers to a signal exiting at Port 2 for an incident signal at Port 2
S22 is the ratio of $b2/a2$

S12 refers to a signal exiting at Port 1 for a incident signal at Port 2
S12 is the ratio of $b1/a2$

I have seen S-parameters described as S_{11} , S_{21} , etc. Can you explain?

A linear network can be characterised by a set of simultaneous equations describing the exiting waves from each port in terms of incident waves.

$$S_{11} = b_1 / a_1$$

$$S_{12} = b_1 / a_2$$

$$S_{21} = b_2 / a_1$$

$$S_{22} = b_2 / a_2$$

Note again how the subscript follows the parameters in the ratio ($S_{11}=b_1/a_1$, etc...)



The transmitted and the reflected wave will have changed in amplitude and phase from the incident wave.

Generally the transmitted and the reflected wave will be at the same frequency as the incident wave.

S-parameters are complex (i.e. they have magnitude and angle) because **both** the magnitude and phase of the input signal are changed by the network.

(This is why they are sometimes referred to as *complex scattering parameters*).

These four S-parameters actually contain eight separate numbers:

the real and imaginary parts (or the modulus and the phase angle) of each of the four complex scattering parameters.

Quite often we refer to the magnitude only as it is of the most interest.

How much gain (or loss) you get is usually more important than how much the signal has been phase shifted.

What do S-parameters depend on?

S-parameters depend upon the network and the characteristic impedances of the source and load used to measure it, and the frequency measured at.


i.e.

if the network is changed, the S-parameters change.

if the frequency is changed, the S-parameters change.

if the load impedance is changed, the S-parameters change.

if the source impedance is changed, the S-parameters change.

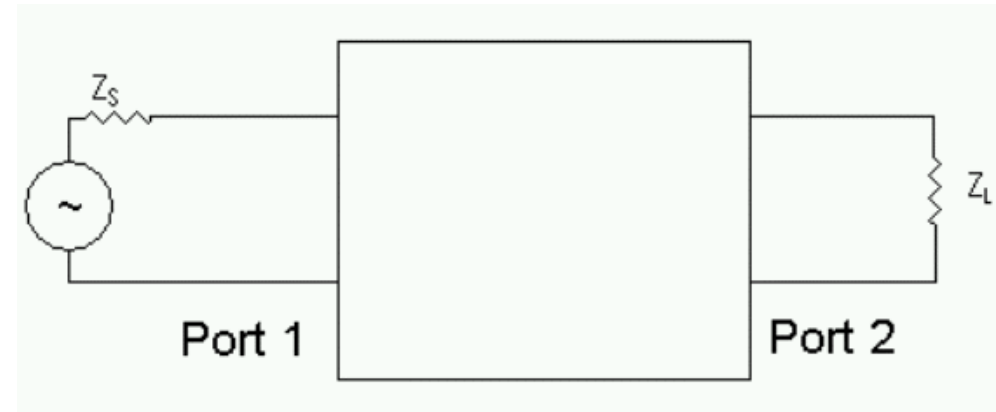

What do S-parameters depend on?

S-parameters depend upon the network and the characteristic impedances of the source and load used to measure it, and the frequency measured at.


i.e.

if the network is changed, the S-parameters change.

if the frequency is changed, the S-parameters change.

if the load impedance is changed, the S-

if the source impedance is changed, the

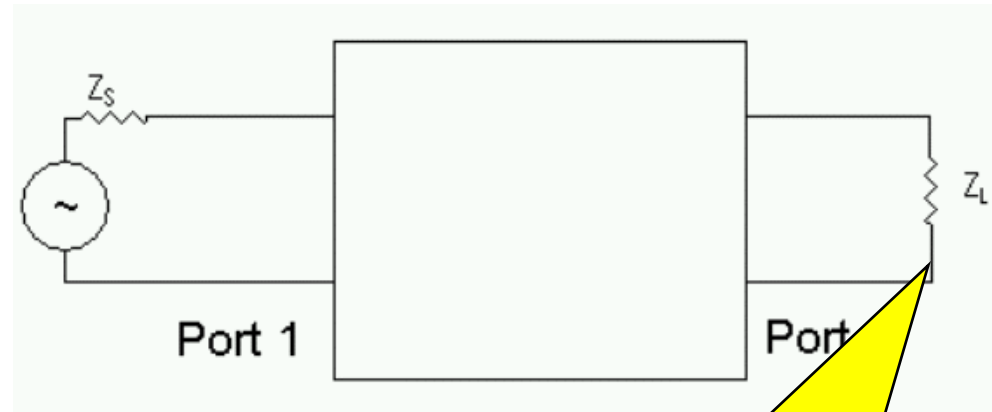

In the Si9000e S-parameters are quoted with source and load impedances of 50 Ohms

What do S-parameters depend on?

S-parameters depend upon the network and the characteristic impedances of the source and load used to measure it, and the frequency measured at.


i.e.

if the network is changed, the S-parameters change.

if the frequency is changed, the S-parameters change.

if the load impedance is changed, the S-parameters change.

if the source impedance is changed, the S-parameters change.

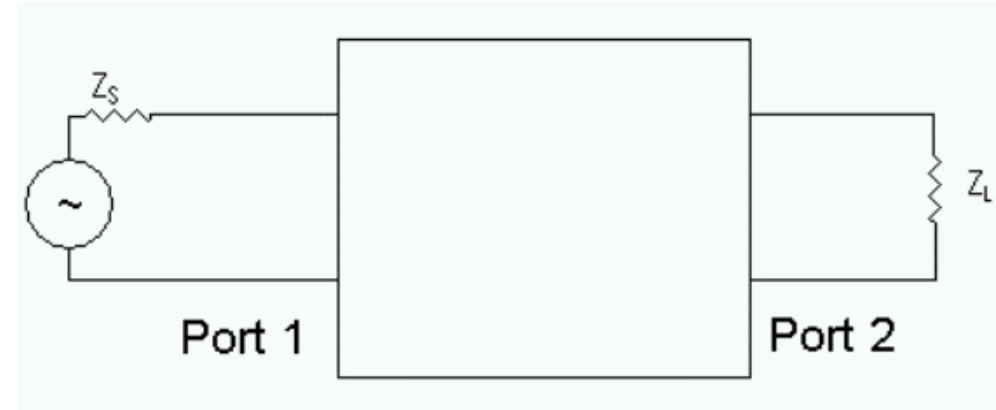

A little math...

This is the matrix algebraic representation of 2 port S-parameters:

$$\begin{pmatrix} b_1 \\ b_2 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \end{pmatrix}$$

Some matrices are symmetrical. A symmetrical matrix has symmetry about the leading diagonal.

A little math...

This is the matrix algebraic representation of 2 port S-parameters:

$$\begin{pmatrix} b_1 \\ b_2 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \end{pmatrix}$$

Some matrices are symmetrical. A symmetrical matrix has symmetry about the leading diagonal.

In the case of a 2-port network, that means that $S_{21} = S_{12}$ and interchanging the input and output ports does not change the transmission properties.

A little math...

This is the matrix algebraic representation of 2 port S-parameters:

$$\begin{pmatrix} b_1 \\ b_2 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \end{pmatrix}$$

Some matrices are symmetrical. A symmetrical matrix has symmetry about the leading diagonal.

In the case of a symmetrical 2-port network, that means that $S_{21} = S_{12}$ and interchanging the input and output ports does not change the transmission properties.

A transmission line is an example of a symmetrical 2-port network.

A little math...

Parameters along the leading diagonal, S_{11} & S_{22} , of the S-matrix are referred to as *reflection coefficients* because they refer to the reflection occurring at one port only.

$$\begin{pmatrix} b_1 \\ b_2 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \end{pmatrix}$$

A little math...

Parameters along the leading diagonal, S_{11} & S_{22} , of the S-matrix are referred to as *reflection coefficients* because they refer to the reflection occurring at one port only.

$$\begin{pmatrix} b_1 \\ b_2 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} \\ S_{21} & S_{22} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \end{pmatrix}$$

Off-diagonal S-parameters, S_{12} , S_{21} , are referred to as *transmission coefficients* because they refer to what happens from one port to another.

Larger networks:

A Network may have any number of ports.

Larger networks:

A Network may have any number of ports.

The S-matrix for an n-port network contains n^2 coefficients (S-parameters), each one representing a possible input-output path.

Larger networks:

A Network may have any number of ports.

The S-matrix for an n-port network contains n^2 coefficients (S-parameters), each one representing a possible input-output path.

The number of rows and columns in an S-parameters matrix is equal to the number of ports.

Larger networks:

A Network may have any number of ports.

The S-matrix for an n-port network contains n^2 coefficients (S-parameters), each one representing a possible input-output path.

The number of rows and columns in an S-parameters matrix is equal to the number of ports.

For the S-parameter subscripts "ij", "j" is the port that is excited (the input port) and "i" is the output port.

Larger networks:

A Network may have any number of ports.

The S-matrix for an n-port network contains n^2 elements (S-parameters), each one representing a possible input-output path.

The number of rows and columns in the S-parameters matrix is equal to the number of ports.

For the S-parameter subscripts “ij”, “j” is the port that is excited (the input port) and “i” is the output port.



Yes i for **output** j for **input**
— logical ;-)

Larger networks:


A Network may have any number of ports.

The S-matrix for an n-port network contains n^2 coefficients (S-parameters), each one representing a possible input-output path.

The number of rows and columns in an S-parameters matrix is equal to the number of ports.

For the S-parameter subscripts "ij", "j" is the port that is excited (the input port) and "i" is the output port.

This is a 4-port network

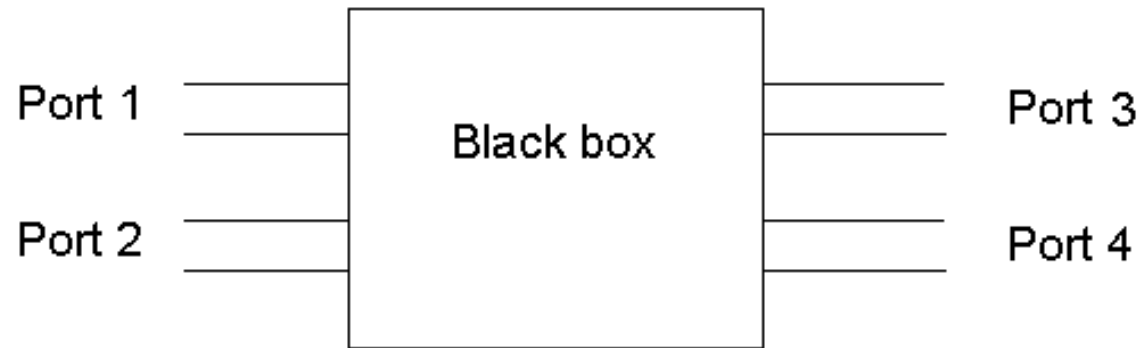

$$\begin{pmatrix} b_1 \\ b_2 \\ b_3 \\ b_4 \end{pmatrix} = \begin{pmatrix} S_{11} & S_{12} & S_{13} & S_{14} \\ S_{21} & S_{22} & S_{23} & S_{24} \\ S_{31} & S_{32} & S_{33} & S_{34} \\ S_{41} & S_{42} & S_{43} & S_{44} \end{pmatrix} \times \begin{pmatrix} a_1 \\ a_2 \\ a_3 \\ a_4 \end{pmatrix}$$

Sum up...

- S-parameters are a powerful way to describe an electrical network
- S-parameters change with frequency / load impedance / source impedance / network
- S_{11} is the *reflection coefficient*
- S_{21} describes the *forward transmission coefficient* (responding port 1st!)
- S-parameters have both magnitude and phase information
- Sometimes the gain (or loss) is more important than the phase shift and the phase information may be ignored
- S-parameters may describe large and complex networks

- If you would like to learn more please see next slide:

Further reading:

Agilent papers

<http://www.sss-mag.com/pdf/an-95-1.pdf>

<http://www.sss-mag.com/pdf/AN154.pdf>

National Instruments paper

<http://zone.ni.com/devzone/nidzgloss.nsf/webmain/D2C4FA88321195FE8625686B00542EDB?OpenDocument>

Other links:

<http://www.sss-mag.com>

<http://www.microwaves101.com/index.cfm>


<http://www.reed-electronics.com/tmworld/article/CA187307.html>

<http://en.wikipedia.org/wiki/S-parameters>

Online lecture OLL-140 Intro to S-parameters - Eric Bogatin

Online lecture OLL-141 S_{11} & Smith charts - Eric Bogatin

www.bethesignal.com

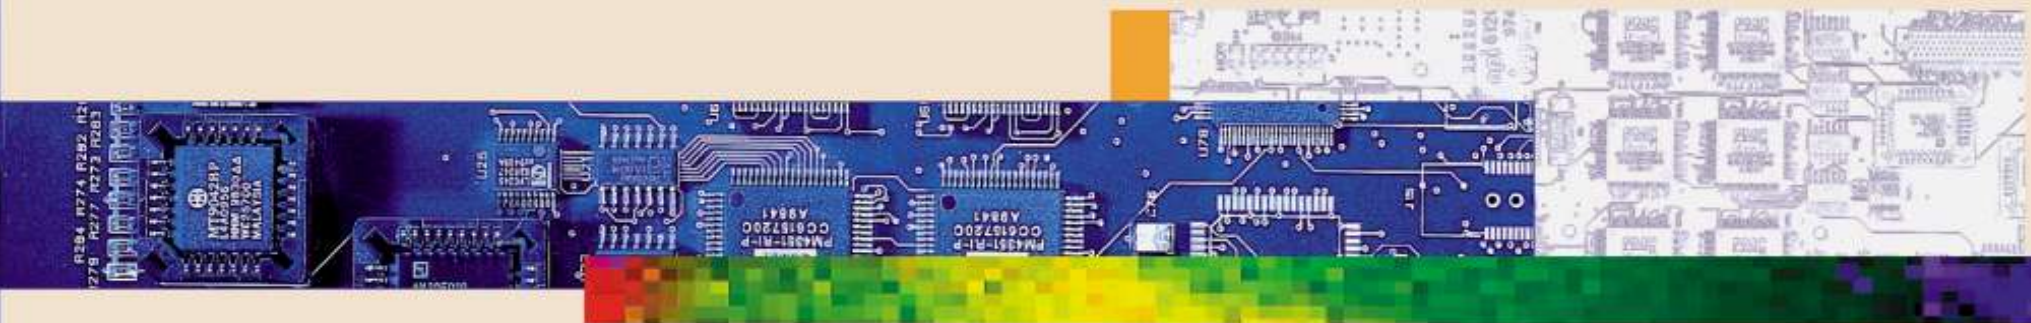


Design & test tools for controlled impedance & signal integrity

PCB faultfinding systems & software

www.polarinstruments.com

Your contacts at Polar:

[International offices - click here](#)

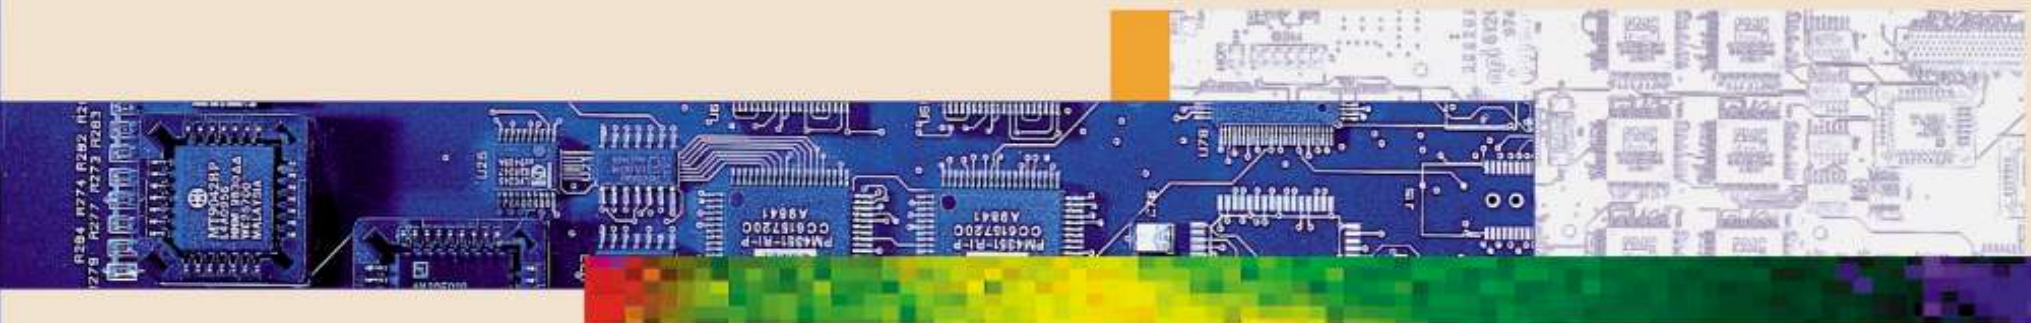

**For more information
please visit:
www.polarinstruments.com**

Your contacts at Polar:

USA: Ken Taylor (800) 328 0817

Europe: Neil Chamberlain +44 23 9226 9113

Asia / Pacific: Terence Chew +65 6873 7470